




OpenVox Communication Co.Ltd

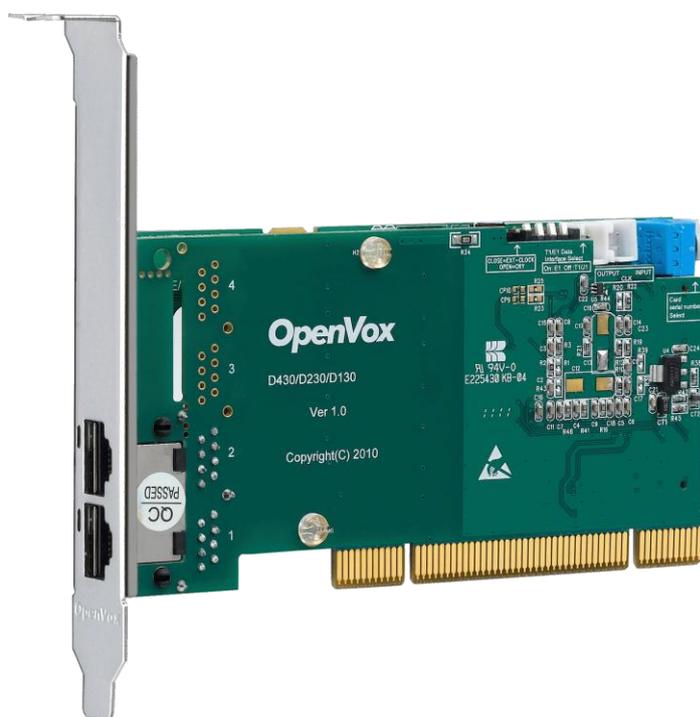

D230P/DE230P on DAHDI User Manual

Version: 2.2





OpenVox Communication Co.Ltd

Most Advanced Asterisk Cards

Address: F/3, Building No.127, Jindi Industrial Zone,
Shazui Road, Futian District, Shenzhen, Guangdong 518048, China
Tel:+86-755-82535461, 82535095, 82535362, Fax:+86-755-83823074

Business Contact: sales@openvox.com.cn

Technical Support: support@openvox.com.cn

Business Hours: 09:00-18:00(GMT+8) from Monday to Friday

URL: www.openvox.cn

Thank You for Choosing OpenVox Products!

Copyright

Copyright© 2011 OpenVox Inc. All rights reserved. No part of this document may be reproduced without prior written permission.

Confidentiality

Information contained herein is of a highly sensitive nature and is confidential and proprietary to OpenVox Inc. No part may be distributed, reproduced or disclosed orally or in written form to any party other than the direct recipients without the express written consent of OpenVox Inc.

Disclaimer

OpenVox Inc. reserves the right to modify the design, characteristics, and products at any time without notification or obligation and shall not be held liable for any error or damage of any kind resulting from the use of this document.

OpenVox has made every effort to ensure that the information contained in this document is accurate and complete; however, the contents of this document are subject to revision without notice. Please contact OpenVox to ensure you have the latest version of this document.

Trademarks

All other trademarks mentioned in this document are the property of their respective owners.

Customer Information

1. This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAEQ##TXXXX. If requested, this number must be provided to the telephone company.
2. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.
3. If this equipment [US: G4DDWNANDEX30] causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you

will be advised of your right to file a complaint with the FCC if you believe it is necessary.

4. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
5. If trouble is experienced with this equipment [US: G4DDWNANDEX30], for repair or warranty information, Service can be facilitated through our office at:
Address: F/3, Block No.127, Jindi Industrial Zone, Shazui Road, Futian District, Shenzhen, Guangdong 518048, China
Tel:+86-755-82535461, 82535095, 82535362, Fax:+86-755-83823074
Business Contact: sales@openvox.com.cn
Technical Support: support@openvox.com.cn

If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

6. Please follow instructions for repairing if any; otherwise do not alternate or repair any parts of device except specified.
7. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.
8. If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this [US: G4DDWNANDEX30] does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.
9. If the telephone company requests information on what equipment is connected to their lines, inform them of:
 - a) The ringer equivalence number [NAN]
 - b) The USOC jack required [RJ48C]
 - c) Facility Interface Codes ("FIC") [04DU9.1SN]
 - d) Service Order Codes ("SOC") [6.0N]
 - e) The FCC Registration Number [US: G4DDWNANDEX30]
10. The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of

RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. The REN for this product is part of the product identifier that has the format US:AAEQ##TXXXX. The digits represented by ## are the REN without a decimal point. For this product the FCC Registration number is [US: G4DDWNANDEX30] indicates the REN would be NAN.

IC CS-03 WARNING:

This product meets the applicable Industry Canada technical specifications.

Contents

General Safety Instructions	6
Test Environments	7
Chapter 1 Overview.....	8
1.1 What is Asterisk	8
1.2 What is D230P/DE230P	9
Chapter 2 Hardware Setup	11
2.1 Span type setup	11
2.2 CardID switch setup	11
2.3 Slot compatibility	12
2.4 Timing cable	12
Chapter 3 Software Installation and Configuration.....	14
3.1 Download	14
3.2 Installation.....	15
3.3 Configuration	19
Chapter 4 Reference	26
Appendix A Specifications	27
Appendix B Hardware Disassembling Figure	28
Appendix C Jumper and Switch Settings	29

General Safety Instructions



CAUTION

1. The computers that have D230P/DE230P card installed must comply with the country's specific safety regulations.
2. Only service personnel should go to install D230P/DE230P card.
3. Before installing D230P/DE230P card, please unplug the power cord and remove the cover from your PC.
4. For avoiding personal injuries and damages to your machine and D230P/DE230P card, make sure bracket of the card is secured to the PC's chassis ground by fastening the card with a screw.
5. Electrical Surges, ESD are very destructive to the equipment. To avoid it, make sure there is a low impedance discharge path from your computer to chassis ground.
6. To reduce the risk of damage or injury, please follow all steps or procedures as instructed.

Test Environments

CentOS-5.5

Kernel version: 2.6.18-194. el5

DAHDI: dahdi-linux-complete-current

Asterisk: asterisk-1.8.5.0

Libpri:libpri-1.4.11.5

Hardware: OpenVox D230P/DE230P

Chapter 1 Overview

1.1 What is Asterisk

The Definition of Asterisk is described as follows:

Asterisk is a complete PBX in software. It runs on Linux, BSD, Windows (emulated) and provides all of the features you would expect from a PBX and more. Asterisk does voice over IP in four protocols, and can interoperate with almost all standard-based telephony equipment using relatively cost-effective hardware. Asterisk provides Voicemail services with Directory, Call Conferencing, Interactive Voice Response, Call Queuing. It supports for three-way calling, caller ID services, ADSI, IAX, SIP, H323 (as both client and gateway), MGCP (call manager only) and SCCP/Skinny (voip-info.org).

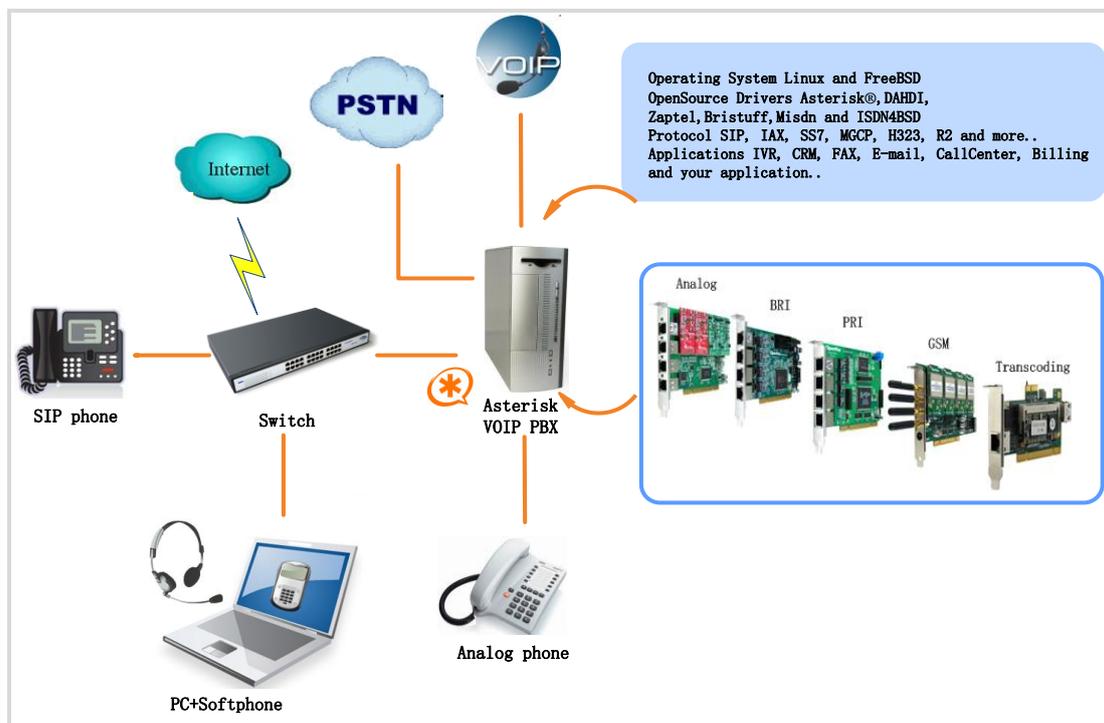


Figure 1 Topology

1.2 What is D230P/DE230P

The D230P/DE230P is an upgrade product of the D210P/DE210P. They support T1, E1, and J1 environments and is selectable on a per-card or per-port basis. D230P/DE230P is supposed to be the most advanced 2 port T1/E1/J1 asterisk® card with superior quality in the open source community. The leading innovation ensures users to adjust the interrupts frequency to reduce the CPU load up to 70% and adjust the interrupt number to avoid interrupt number sharing or conflict. DE230P offers an on-board Octasic® DSP-based echo cancellation module. It supports T1, E1, and J1 environments and is selectable on a per-card or per-port basis.

The Octasic® DSP-based EC module enables users to eliminate echo tails up to 128ms or 1024 taps across all 64 channels in E1 mode or 48 channels in T1/J1 modes. Further, this module takes advantage of the Octasic® Voice Quality Enhancement to provide superior sound quality on all calls. D230P/DE230P supports industry standard telephony and data protocols, including Primary Rate ISDN (both N. American and Standard Euro) protocol families for voice, PPP, Cisco, HDLC, and Frame Relay data modes. Both line-side and trunk-side interfaces are supported. D230P/DE230P works with Asterisk®, Elastix®, FreeSWITCH™, PBX in a Flash, trixbox®, Yate™ and IPPBX/IVR projects as well as other Open Source and proprietary PBX, Switch, IVR,

and VoIP gateway applications.

Target Applications

- Voice-over Internet Protocol (VoIP) Services
- Complex IVR Trees
- "Meet-Me" Bridge Conferencing
- Calling Card Platforms
- VoIP Gateways (support SIP, H.323, and IAX)
- Legacy PBX/IVR Services
- Voice/Data Router (replace expensive routers)
- PRI/Switch Compatibility-Network or CPE

Chapter 2 Hardware Setup

There are some points that should be paid attention to when setting up D230P/DE230P.

2.1 Span type setup

Each DIP switch controls one span configuration for E1 or T1. Setting DIP1 to ON means SPAN1 will be E1. Setting DIP1 to OFF means SPAN1 will be T1.

2.2 CardID switch setup

If want to install more than one card of D430P/DE430P in a PC, you should take care of the card ID switch. There are two pieces of rules you must obey:

- The first card must be set to 0, which is a card that will be initialized (i.e. installing driver) firstly when the system boot up. And the second should be set to 1, and so on.
- At most cases, Linux will initialize PCI devices according to their slot order. The slot nearest to the CPU will be initialized firstly and the far end slot will be initialized at last. That is to say, the card which is nearest to the CPU ID should be set to 0 if there is more than one D430P/DE430P on your machine.

2.3 Slot compatibility

D230P/DE2230P is compatible with 32-bit 5.0V PCI slot, 64-bit 3.3V PCI slot or 64-bit 5.0V PCI slot except PCI-E slot; you should confirm your slot type and insert D230P/DE2230P into any type of PCI slot as previously described.

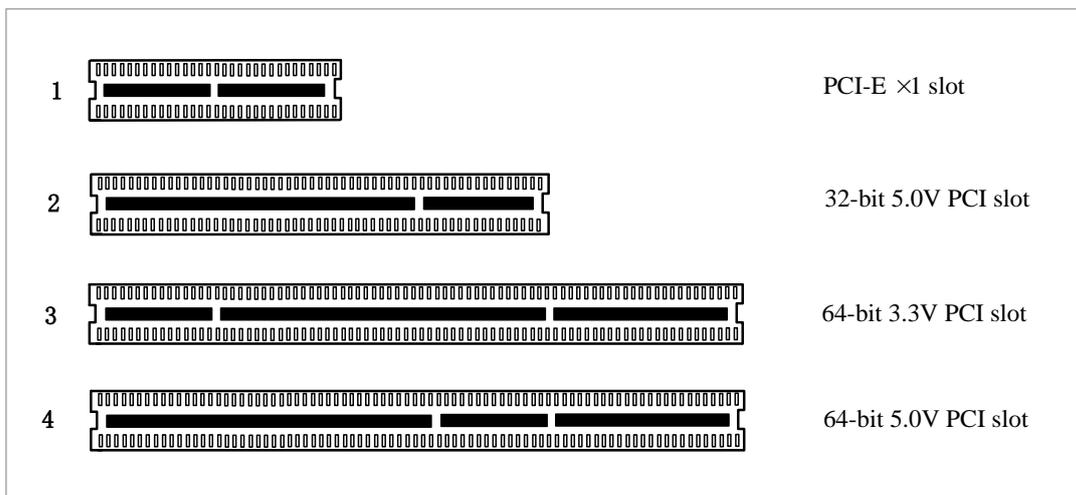


Figure 2 PCI-E and PCI slots

2.4 Timing cable

If you have just one card in the system, all channels on that card have already run under the same clock source, so timing cable is unnecessary.

But if there are more than one card, using timing cable has some advantages. Before using the clock line, each card works on its own clock, therefore precision of the clock is limited; each card will send /receive voice data at different speeds. In voice usage, this small issue can be omitted, but in data communication such as Fax/Modem, it will cause



big problems. Data loss will cause communication broken or fax broken. Timing cable will force all cards to work at the same clock source, send data at the same speed, as a result no data will lost.

If you found J914 (input) and J915 (output) interfaces on the card, it means the card supports clock line, for details, please refer to [HERE](#).



Chapter 3 Software Installation and Configuration

D230P/DE230P supports DAHDI software driver on Linux. To make full D230P/DE230P, you should download, compile, install and configure Libpri, DAHDI and Asterisk.

3.1 Download

DAHDI software packages are available on OpenVox official website or Digium. Some patches should be added while the driver source is from Digium, therefore, it is recommended that downloading the DAHDI driver package from OpenVox official website.

Gain DAHDI source package from OpenVox:

http://downloads.openvox.cn/pub/drivers/dahdi-linux-complete/openvox_dahdi-linux-complete-current.tar.gz

Get asterisk software package from Digium official website:

<http://downloads.asterisk.org/pub/telephony/asterisk/releases/asterisk-1.8.5.0.tar.gz>

Get libpri software package from digium official website:

<http://downloads.asterisk.org/pub/telephony/libpri/releases/libpri-1.4.11.5.tar.gz>

Execute the following commands under the directory of /usr/src/ in

generally, the former three below are used for downloading these three packages and the later three are for unzipping them.

```
# wget http://downloads.openvox.cn/pub/drivers/dahdi-linux-complete/openvox_dahdi-linux-complete-current.tar.gz
```

```
# wget http://downloads.asterisk.org/pub/telephony/asterisk/releases/asterisk-1.8.5.0.tar.gz
```

```
# wget http://downloads.asterisk.org/pub/telephony/libpri/releases/libpri-1.4.11.5.tar.gz
```

```
# tar -xvzf openvox_dahdi-linux-complete-current.tar.gz
```

```
# tar -xvzf asterisk-1.8.5.0.tar.gz
```

```
# tar -zxvf libpri-1.4.11.5.tar.gz
```

3.2 Installation

1. Hardware detection

```
# lspci -vvvv
```

Check the outcome and confirm your system has recognized DE230P. If it

has been recognized, "communication controller" will be displayed in the output information like that:

```
01:02.0 Class ff00: Digium, Inc. Unknown device 1220 (rev 01)
  Subsystem: Unknown device 0005:0000
  Control: I/O+ Mem+ BusMaster+ SpecCycle- MemWINV+ VGASnoop- ParErr-
Stepping- SERR- FastB2B-
  Status: Cap- 66MHz- UDF- FastB2B- ParErr- DEVSEL=slow >TAbort- <TAbort-
<MAbort- >SERR- <PERR-
  Latency: 64, Cache Line Size: 16 bytes
  Interrupt: pin A routed to IRQ 225
  Region 0: Memory at dcdf8000 (32-bit, non-prefetchable) [size=32K]
```

Figure 3 Hardware detection

If D230P/DE230P is not recognized by the system, you have to power off and take out the card, then try to insert it into other PCI slot.

2. Software installation

Some dependencies are crucial. If any of them is absent, the software installation process would not go through successfully. Let's run "yum install XX" (XX stands for the dependency's name) to check the availability of dependencies.

```
# yum install bison
# yum install bison-devel
# yum install ncurses
# yum install ncurses-devel
# yum install zlib
```

```
# yum install zlib-devel
# yum install openssl
# yum install openssl-devel
# yum install gnutls-devel
# yum install gcc
# yum install gcc-c++
# yum install libxml2
# yum install libxml2-devel
```



If there is no kernel-devel source in the system, users should run the following command to install the kernel-devel to peer current kernel:

```
# yum install kernel-devel-`uname -r`
```

While if there is no matched kernel-devel found, you should download matched RPM package to install it, or execute the following command to update to the latest and stable kernel version:

```
# yum install kernel kernel-devel
```

After installed, please reboot your machine to apply the new kernel and install the dependencies. If the dependency has been installed, system indicates that nothing to do which means you could go to next one directly. Otherwise, the system will keep on installing it.

Among libpri, DAHDI and Asterisk, let's install libpri firstly. Please execute those commands under the directory of /usr/src/ in generally:

```
# cd libpri-XX
```

```
# make
```

```
# make install
```

Then change to the directory of dahdi-linux-complete-XX (XX represents DAHDI version), then perform commands one by one to install DAHDI.

```
# cd /usr/src/dahdi-linux-complete-XX
```

```
# make
```

```
# make install
```

```
# make config
```



Caution: If there is something wrong after "make", please refer to [HERE](#). In the url link, the moderator introduces you a method how to patch. After patching, save your changes and exit. Then run "make" again, if successfully done, it is time for you to install Asterisk.

Please operate those commands to install Asterisk.

```
# cd asterisk-1.8.5.0
# ./configure
# make
# make install
# make samples
```



"make samples" will install the standard sample configuration file in the directory `/etc/asterisk`. As a freshman, you should perform `make samples`, that is to say, it is unnecessary to perform `make samples` every time. Because once performed, it will cover the old sample configuration files you have installed.

3.3 Configuration

1. Driver loading

After compiling and installing DAHDI and Asterisk, please load the driver by running:

```
# modprobe dahdi
# modprobe wct4xxp
# dahdi_genconf
```

If there is any error, please trace the cause. Until all errors are clear up, you could execute "dahdi_genconf" again, and then go to the next step. By running "dahdi_genconf", it will generate /etc/dahdi/system.conf and etc/asterisk/dahdi-channels.conf automatically. Checking whether the generated files information agrees with your hardware setup, if not, you should modify to your specific requirements. Do not forget to confirm dahdi-channels.conf is included in chan_dahdi.conf, if not, run command:

```
# echo "#include dahdi-channels.conf" >>
/etc/asterisk/chan_dahdi.conf
```

A part of system.conf which is one of the basic channel configuration files is displayed.

```
span=1,1,0,ccs,hdb3,crc4
# termtype: te
bchan=1-15,17-31
dchan=16
#echocanceller=mg2,1-15,17-31

# Span 2: TE2/0/2 "T2XXP (PCI) Card 0 Span 2"
span=2,2,0,ccs,hdb3,crc4
# termtype: te
bchan=32-46,48-62
dchan=47
#echocanceller=mg2,32-46,48-62

# Global data

loadzone          = us
defaultzone       = us
```


Figure 4 A part of system.conf

2. Country mode modification

In order to match your country pattern, you need to change parameters `loadzone` and `defaultzone` to your country. For example, your system is in CHINA, you would like them change to:

```
loadzone = cn
```

```
defaultzone = cn
```

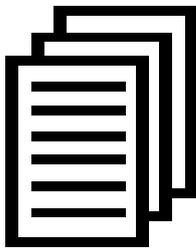

Some zonedata is available in the file

`../dahdi-XX/tools/zonedata.c`, you can refer to it to match

your country mode. Meanwhile, you also need to modify

another parameter which is in file

`/etc/asterisk/indications.conf`.

```
country=cn
```

A part of file `/etc/asterisk/dahdi-channels.conf` is showed as below.

(Modification, if it is not agree with the hardware setup)

```
; Span 1: TE2/0/1 "T2XXP (PCI) Card 0 Span 1" (MASTER)
group=0,11
context=from-pstn
switchtype = euroisdn
signalling = pri_cpe
channel => 1-15,17-31
context = default
group = 63

; Span 2: TE2/0/2 "T2XXP (PCI) Card 0 Span 2"
group=0,12
context=from-pstn
switchtype = euroisdn
signalling = pri_cpe
channel => 32-46,48-62
context = default
group = 63
```

Figure 5 A part of dahdi-channels.conf

After modifying the country mode, please execute the following command:

```
# dahdi_cfg -vvvvvv
```

The command is used for reading and loading parameters in the configuration file system.conf and writing to the hardware. A part of outputs are showed in the following figure.

```

[root@localhost ~]# dahdi_cfg -v
DAHDI Tools Version - 2.6.1

DAHDI Version: 2.6.1
Echo Cancellor(s):
Configuration
=====

SPAN 1: CCS/HDB3 Build-out: 0 db (CSU)/0-133 feet (DSX-1)
SPAN 2: CCS/HDB3 Build-out: 0 db (CSU)/0-133 feet (DSX-1)

62 channels to configure.

Setting echocan for channel 1 to none
Setting echocan for channel 2 to none
Setting echocan for channel 3 to none
Setting echocan for channel 4 to none
Setting echocan for channel 5 to none
Setting echocan for channel 6 to none
Setting echocan for channel 7 to none
Setting echocan for channel 8 to none
.
.
Setting echocan for channel 17 to none
Setting echocan for channel 18 to none
Setting echocan for channel 19 to none
Setting echocan for channel 20 to none
Setting echocan for channel 21 to none
Setting echocan for channel 22 to none
Setting echocan for channel 23 to none
Setting echocan for channel 24 to none
Setting echocan for channel 25 to none
Setting echocan for channel 26 to none
Setting echocan for channel 27 to none
Setting echocan for channel 28 to none
Setting echocan for channel 29 to none
Setting echocan for channel 30 to none
Setting echocan for channel 31 to none
Setting echocan for channel 32 to none
Setting echocan for channel 33 to none
.
.
Setting echocan for channel 57 to none
Setting echocan for channel 60 to none
Setting echocan for channel 61 to none
Setting echocan for channel 62 to none
    
```

Figure 6 Channel map



3. Asterisk initiation

```
# asterisk -vvvvvvvgc
```

If asterisk is already activate, run "asterisk -r" instead. In the CLI, please run the following command:

```
localhost*CLI> dahdi show channels
```

```
1      from-pstn      default      In Service
2      from-pstn      default      In Service
3      from-pstn      default      In Service
4      from-pstn      default      In Service
5      from-pstn      default      In Service
6      from-pstn      default      In Service
7      from-pstn      default      In Service
8      from-pstn      default      In Service
9      from-pstn      default      In Service
10     from-pstn      default      In Service
11     from-pstn      default      In Service
12     from-pstn      default      In Service
13     from-pstn      default      In Service
14     from-pstn      default      In Service
15     from-pstn      default      In Service
17     from-pstn      default      In Service
18     from-pstn      default      In Service
19     from-pstn      default      In Service
20     from-pstn      default      In Service
21     from-pstn      default      In Service
.....      .....      .....      .....
58     from-pstn      default      In Service
59     from-pstn      default      In Service
60     from-pstn      default      In Service
61     from-pstn      default      In Service
62     from-pstn      default      In Service
```

Figure 7 channels show

If DAHDI channels are found, it means they have been loaded into

Asterisk. You are going to edit dialplan by your requirements.

4. Dialplan edit

Users must make sure that the context "from-pstn" and "from-internal" are in extensions.conf. Here a simple example is given:

```
# vim /etc/asterisk/extensions.conf

[from-pstn]
exten => s,1,Answer()
exten => s,n,Playback(cc_welcome)
exten => s,n,Hangup()

[from-internal]
exten => _X.,1,Dial(dahdi/g0/${EXTEN})
exten => _X.,n,Hangup
```

Figure 8 dial plan

Additional function

Users should run command "cat /proc/interrupts" to check D230P/DE230P has independent interrupt. If it shares interrupt with other device, it may cause some problems even cannot work normally. While D230P/DE230P allows users to modify interrupt pin during firmware upgrade for avoiding conflict. Or you can see if the EC module is working as follows:

```
[root@localhost ~]# dmesg | grep VPM
VPM450: echo cancellation for 64 channels
wct4xxp 0000:20:00.0: VPM450: hardware DTMF disabled.
wct4xxp 0000:20:00.0: VPM450: Present and operational
servicing 2 span(s)
```

Chapter 4 Reference

www.openvox.cn

www.digium.com

www.asterisk.org

www.voip-info.org

www.asteriskguru.com

Tips

Any questions during installation, please consult in our forum or look up for answers from the following websites:

[Forum](#)

[wiki](#)

Appendix A Specifications

• Weight and size

Weight: D230P 94g

EC2032 10g

Size: 2U Form Factor: $12 \times 6.4 \times 1.8 \text{cm}^3$

• Interfaces

PCI Bus: 3.3V or 5V bus slot, PCI 2.2 or above

• Environments

Temperature Operation: 0 ~50 °C

Temperature Storage: D230P -65 to 125 °C

EC2032 -40 to 75 °C

Humidity: 10 ~90% NON-CONDENSING

• Power consumption

Voltage: 3.3V, 5V

• Hardware and software requirements


RAM 128 + MB

Linux kernel 2.4.X or 2.6.X

CPU 800+ MHZ

Appendix B Hardware Disassembling Figure

You can refer to the following figure to assemble or disassemble D230P/DE230P, since they are very similar.

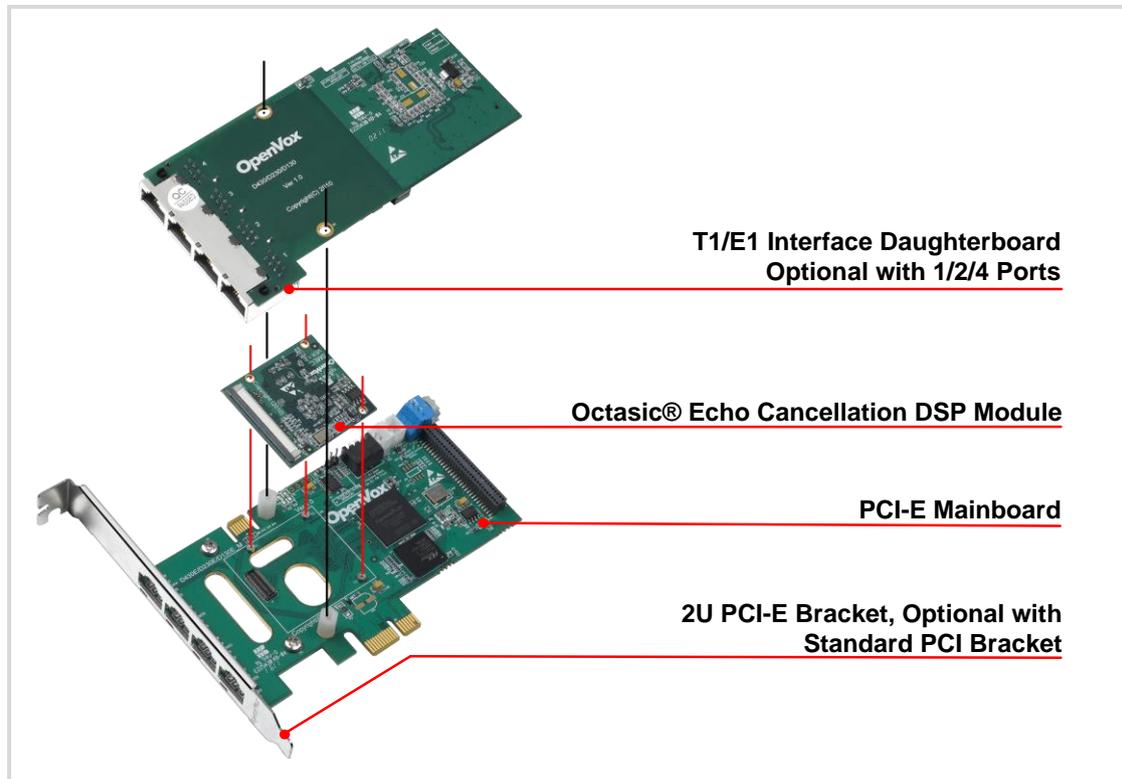

Appendix C Jumper and Switch Settings

